


April 2019

## Redon Nadeln

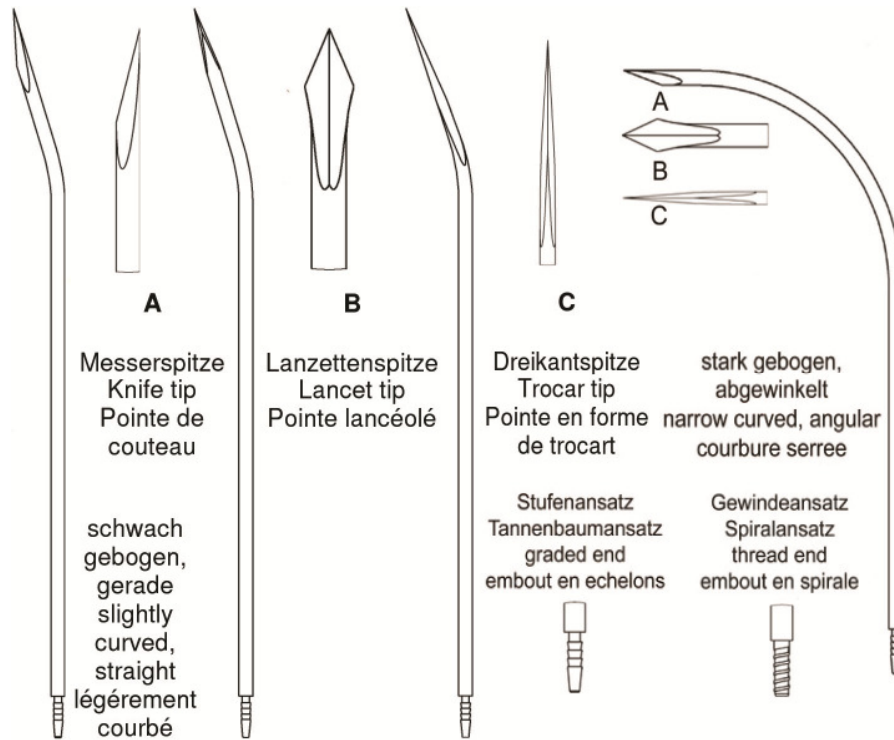

( Abbildungen in Originalgröße 1:1 finden Sie auf der Rückseite )

	Messerspitze schwach geb.	Messerspitze stark geb.	Lanzetten- spitze schwach geb.	Dreikant- spitze schwach geb.	Dreikant- spitze stark geb.
<b>Gewindeansatz =Standardausführung</b>	<b>A</b>		<b>B</b>	<b>C</b>	
Charr. 06	21.102.06	21.103.06	21.108.06	21.114.06	21.115.06
Charr. 08	21.102.08	21.103.08	21.108.08	21.114.08	21.115.08
Charr. 10	21.102.10	21.103.10	21.108.10	21.114.10	21.115.10
Charr. 12	21.102.12	21.103.12	21.108.12	21.114.12	21.115.12
Charr. 14	21.102.14		21.108.14	21.114.14	21.115.14
Charr. 16	21.102.16	21.103.16	21.108.16	21.114.16	21.115.16
Charr. 18				21.114.18	

<b>Stufenansatz</b>	<b>A</b>		<b>B</b>	<b>C</b>	
Charr. 06				21.112.06	
Charr. 08	21.100.08	21.101.08	21.106.08	21.112.08	21.113.08
Charr. 10	21.100.10	21.101.10	21.106.10	21.112.10	21.113.10
Charr. 12	21.100.12	21.101.12	21.106.12	21.112.12	21.113.12
Charr. 14	21.100.14	21.101.14	21.106.14	21.112.14	21.113.14
Charr. 16	21.100.16	21.101.16	21.106.16	21.112.16	21.113.16
Charr. 18	21.100.18	21.101.18	21.106.18	21.112.18	21.113.18

## Redon Nadeln

Abbildungen in Originalgröße 1:1

